


SFS Dynamic 2D-C Hinge Adjustment Instructions

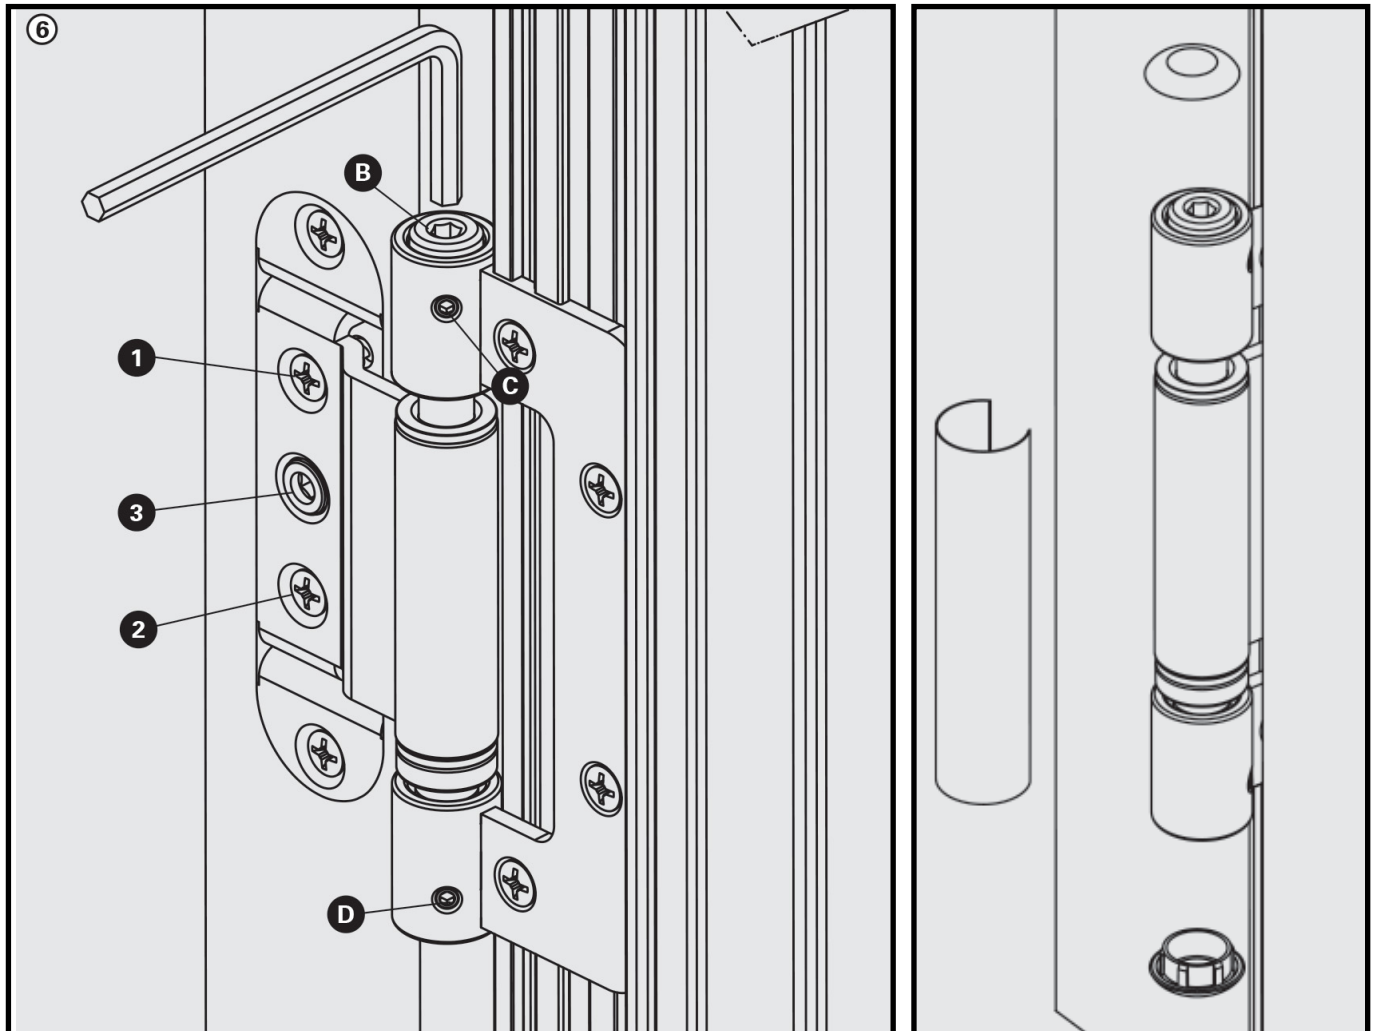

Horizontal adjustment:

unscrew by three turns, screws ① and ②.

Tighten or loosen alternately screw ③ with a 4 mm Allen Key.

Tighten screws ① and ②.

Adjustment $\pm 2\text{mm}$.

Height:

Loosen the screws marked C and D.

Turn the pin with a 4mm Allen Key as shown in figure 6.

Adjustment: $-2/+6\text{mm}$.

Insert caps and cover as shown in figure.